


# Quickstart Guide

ULTIMADROME

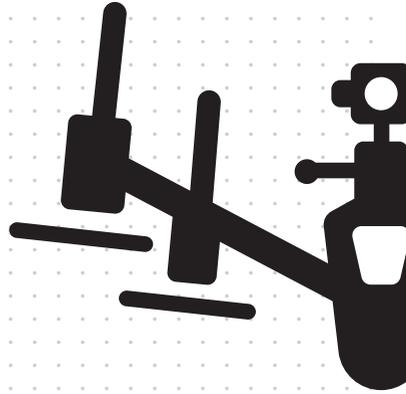

ULTIMADROME

## DJI Inspire 2 Safety FIX

This is a permanent solution to solve the propeller vibration issue for **DJI Inspire 2**.

Please read this manual before use.

Thank you for choosing **ULTIMADROME**.

### INSIDE THIS KIT YOU WILL FIND

- This Quickstart Guide
- Components for both arms
- All necessary Tools

**WARNING**

THIS PRODUCT IS NOT SPONSORED OR DISTRIBUTED BY DJI

### COMPONENTS



▼ 1x RIGHT ROD

▲ 1x LEFT ROD



2x CLAMP A



2x CLAMP B



2x ADHESIVE S



2x COLLAR B



2x COLLAR S



2x ADHESIVE B

### TOOLS



1x HEX KEY




4x SCREW




1x TIGHTENER

PLEASE NOTE: **THE MOUNTING PROCEDURES HAVE TO BE MADE IN LANDING MODE.**  
**THE RIGHT AND THE LEFT ROD HAVE DIFFERENT MOUNTING PROCEDURES.**


### **LEFT ROD MOUNTING INSTRUCTIONS:**

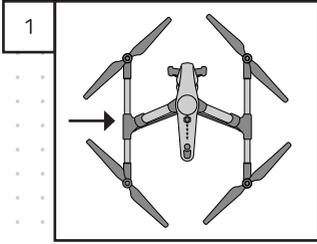


Start mounting the left kit, by facing the left side of the drone. The mounting procedures have to be made in **landing mode**.

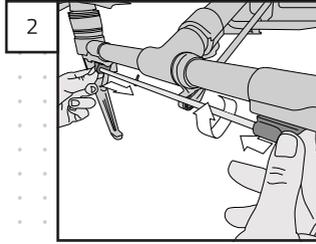


First place **Clamp A** around the landing gear and insert the **Left Rod** into the hole. Repeat the procedure on the other side placing **Clamp B** and screwing the **Left Rod** clockwise.

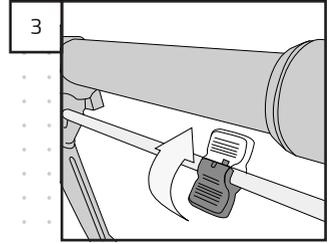


Use the **Tightener** to turn the **Spring Pin** clockwise until the **Left Rod** is completely firm and the **Pin** is in upright position.

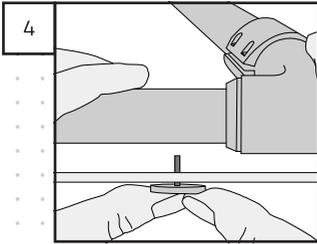


Use a coin or any other sturdy tool to push the **Spring Pin** up until it sticks out from above the **Rod** only.

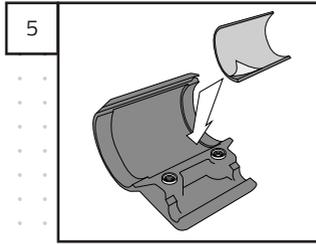


Place the adhesive strips on the inside of **Collar B** and **Collar S**.

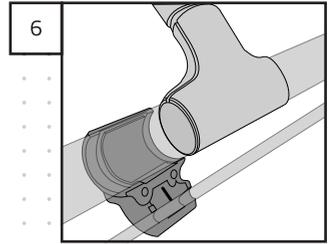


Place **Collar S** behind the drone's arm and the **Left Rod**. Make sure the **Spring Pin** is placed in the middle of the **Collar**.

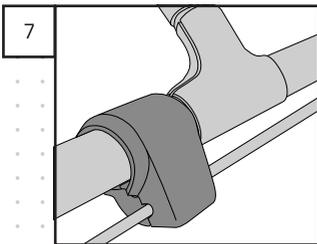

Align the upper parts of **Collar B** and **Collar S**. Snap them into place, ensuring all parts are completely secured and enclosed.

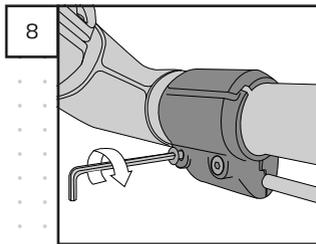

Tighten both screws with the **Hex Key** to secure the **Collars**. Be careful not to deform the plastic components.

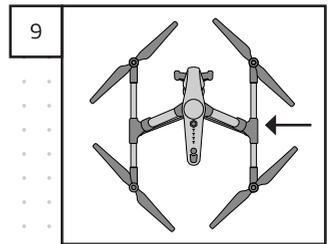

**RIGHT ROD:** Please note that the **Right Rod** follows the same procedure as the left, but the rod needs to be screwed **counter clockwise**.

### **RIGHT ROD MOUNTING INSTRUCTIONS:**

**ATTENTION: TO FIT THE RIGHT ROD FOLLOW THE SAME PROCEDURE AS THE LEFT ROD, BUT SCREW THE RIGHT ROD COUNTER CLOCKWISE.**